



How are we protecting our guest and staff?

- 1) **We are now the First business in the area to have installed the most recent technology in reducing the spread of those unfriendly micro intruders that neither of us want. *Please scan the QR code for info!***
Or see details on the documents that follow this letter. If you'd like to have this system for your home or business, email us at info@banahillusa.com
- 2) We sanitize every table area after previous guest seating's and have a hand sanitizing station set up at the front counter and the City of Brenham provided one to the right when you exit.
- 3) Our staff wears face mask and we offer mask for sale at the front counter next to the jukebox. The jukebox is hands free. You may download a mobile application from your phones app store by searching for TouchTunes. This will allow you to purchase music selections and play them on the jukebox from your phone.
- 4) We offer QR pay! With QR Pay, you may pay your bill by simply scanning the unique code on your order receipt to pay with your smart phone. It's integrated with our point-of-sale for a seamless payment experience. QR ordering at the table coming soon!
- 5) We use a water filtration system that **purifies all drinking water used for our Boba Tea's, Slushes, & Shaved Iced.**

Thank you for your support!

Fortune Tea Team



Global Plasma Solutions Virtually Eliminates Static SARS-CoV-2 with Proprietary NPBI™ Technology

Global Plasma Solutions is the first air purification solution to test SARS-CoV-2, achieving a 99.4% reduction of the surface strain within 30 minutes

CHARLOTTE, NORTH CAROLINA — June 10, 2020 — [Global Plasma Solutions](#), the leader in Indoor Air Quality, announced today industry-leading ionization testing results, demonstrating a 99.4% reduction rate on a SARS-CoV-2 (COVID-19) surface strain within 30 minutes, the first instance in which an air purification company has effectively neutralized SARS-CoV-2. Following initial testing of coronavirus 229E in March 2020, Global Plasma Solutions utilized its proprietary [needlepoint bipolar ionization](#) to inactivate SARS-CoV-2. The study was jointly executed with [Aviation Clean Air](#).

In this laboratory study, Aviation Clean Air designed a test to mimic ionization conditions like that of a commercial aircraft's fuselage. Based on viral titrations, it was determined that at 10 minutes, 84.2% of the virus was inactivated. At 15 minutes, 92.6% of the virus was inactivated, and at 30 minutes, 99.4% of the virus was inactivated.

“The testing results we achieved through our proprietary needlepoint bipolar ionization technology clearly demonstrate that Global Plasma Solutions is the gold standard in air purification,” said Global Plasma Solutions Founder and Chief Technology Officer, Charles Waddell. “For any kind of facility from commercial buildings to aircrafts, delivering the cleanest, safest indoor air environment will only become increasingly more important, and our ozone-free technology is one of the most sophisticated products on the market.”

Understanding needlepoint bipolar ionization

Needlepoint bipolar ionization works to safely clean indoor air, leveraging an electronic charge to create a high concentration of positive and negative ions. These ions travel through the air continuously seeking out and attaching to particles. This sets in motion a continuous pattern of particle combination. As these particles become larger, they are eliminated from the air more rapidly.

Additionally, positive and negative ions have microbicidal effects on pathogens, ultimately reducing the infectivity of the virus. Global Plasma Solutions' needlepoint bipolar ionization is ozone-free and the only kind in its category to pass the RCTA DO-160 standard for aircraft. Traditional bipolar ionization systems produce harmful ozone as a byproduct.

About Global Plasma Solutions

[Global Plasma Solutions](#) (GPS) is the leader in Indoor Air Quality, with over 30 patents and more than 150,000 installations worldwide using our needlepoint bipolar ionization (NPBI) technology to deliver clean indoor air that is safe and healthy – producing neither ozone nor other harmful by-products. All of our NPBI products are UL and CE certified and registered and use NPBI to purify the air by eliminating airborne particulates, odors and pathogens. GPS was founded in 2008 and is headquartered in Charlotte, North Carolina.

Reducing the Spread of Disease

GPS clears the air of particles faster

Particulate matter includes pollutants, dust, allergens, mold, bacteria – and viruses. GPS' technology constantly generates a high concentration of positively and negatively charged ions. These ions travel through the air continuously seeking out and attaching to particles. Larger by virtue of combination, these particles are removed from the air more rapidly.

GPS Inactivates Pathogens

When ions come into contact with pathogens, their microbicidal effects reduce the infectivity of the virus.

GPS is Safe


Our needlepoint bipolar ionization is OZONE free and safe to use across commercial, industrial and residential buildings. Traditional bipolar ionization systems produce harmful ozone as a byproduct.

Performance Validation*



SENSITIVITY TESTING

A petri dish containing a pathogen is placed underneath a laboratory hood, then monitored to assess the pathogen's reactivity to NPBI™ over time. This controlled environment allows for comparison across different types of pathogens.

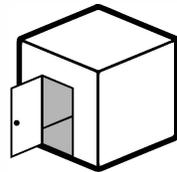

SIMULATION TESTING

Counts of airborne pathogens are taken before and after aerosolizing them into a sealed, unoccupied laboratory environmental room installed with NPBI™ technology. The larger space more closely resembles a real-world environment.

*Global Plasma Solutions (GPS) uses multiple data points to formulate performance validation statements. GPS technology is used in a wide range of applications across diverse environmental conditions. Since locations will vary, clients should evaluate their individual application and environmental conditions when making an assessment regarding the technology's potential benefits.



SARS-CoV-2

Laboratory Name: Innovative Bioanalysis

Cap Lic No: 9501843

Date: 5/27/2020

Pathogen Tested: SARS-CoV-2

INNOVATIVE
BIOANALYSIS
creating solutions | getting results



SENSITIVITY TEST

Objective:

Aviation Clean Air commissioned testing on Global Plasma Solutions' GPS-DM48-AC model to assess its ability to neutralize SARS-CoV-2 in high-ion concentration specialty applications.


Methodology:

Single RE22 control chambers were set on a stainless steel table with pressure verification seals. The chambers had an internal working dimension of 16.5"W x 9"H x 12"D for a total cubic footage of 1.031. Under initial observation it was determined to seal the unit completely with no intake or exhaust port. Testing and control were conducted in an average ambient temperature of 72.6 degrees Fahrenheit.

A singular fan unit was set up at a 45-degree angle and affixed to the testing chamber. The initial control fan speed was measured at an average of 870 Ft/m. Under the original control section, the primary fan was set 10 inches away from ion production unit A and the average air flow speed past the ion producing nodes was 250Ft/m.

Experimental Results:

SARS-CoV-2 was exposed to needlepoint bipolar ionization for a period of 10, 15, and 30 minutes. Based on viral titrations it was determined that at 10 minutes 84.2% of the viral particles became inactive, at 15 minutes 92.6% of the viral particles became inactive, and at 30 minutes 99.4% of the viral particles became inactive.

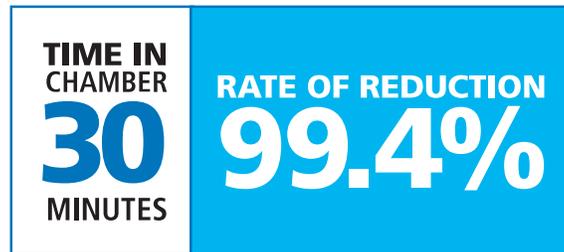

Use of this data is not permitted without written authorization from Global Plasma Solutions, Inc.

GlobalPlasmaSolutions.com

Engineering Air for a Cleaner World™

Independent Laboratory Testing Results Summary



PATHOGEN	TIME IN CHAMBER	RATE OF REDUCTION	TESTING LAB
SARS-CoV-2	30 MINUTES	99.4%	INNOVATIVE BIOANALYSIS creating solutions getting results
Norovirus*	30 MINUTES	93.5%	ATS LABS EXCELLENCE IN ANTIMICROBIAL TESTING
Human Coronavirus**	60 MINUTES	90.0%	ALG ANALYTICAL LAB GROUP
Legionella	30 MINUTES	99.7%	EMSL
Clostridium Difficile	30 MINUTES	86.8%	EMSL
Tuberculosis	60 MINUTES	69.0%	EMSL
MRSA	30 MINUTES	96.2%	EMSL
Staphylococcus	30 MINUTES	96.2%	EMSL
E. Coli	15 MINUTES	99.6%	EMSL

* Surrogate for Norovirus, actual strain tested was Feline Calicivirus, ATCC VR-782, Strain F-9

** Surrogate for Human Coronavirus SARS-CoV-2, actual strain tested was Human Coronavirus 229E

Use of this data is not permitted without written authorization from Global Plasma Solutions, Inc.

GlobalPlasmaSolutions.com

Engineering Air for a Cleaner World™